


How to use the washing machine



1. You need to load the laundry into the machine
2. Add washing powder or capsules for washing
3. Choose the right program for washing with a roller on the washing machine
4. Press the "START" button and wait for the wash finish

Control panel

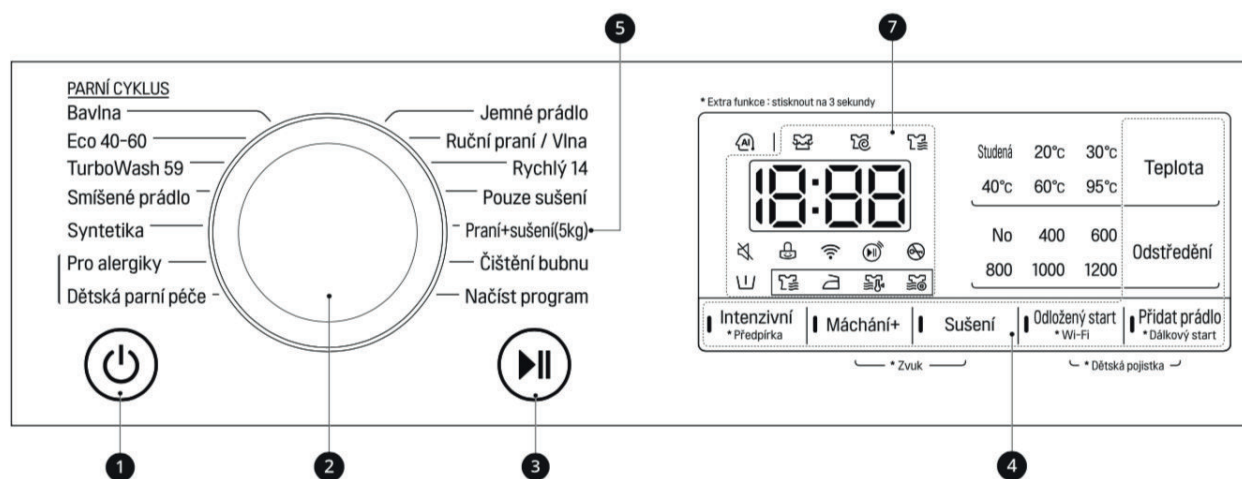

1	ON/OFF	4	Options and Functions
2	Select programmes	5	Wash + Dry
3	Start/Pause	6	Display



Programs

Bavlna	Cotton	Jemné prádlo	Delicates
Eco 40-60	Eco 40-60	Ruční praní / Vlna	Hand/Wool
TurboWash 59	TurboWash 59	Rychlý 14	Speed 14
Smíšené prádlo	Mixed fabric	Pouze sušení	Dry only
Syntetika	Synthetic	Praní + sušení	Wash+dry
Pro alergiky	Allergy care	Čištění bubny	Tub clean
Dětská parní péče	Baby steam care	Načíst program	Download cycle